User manual ROLLER SHUTTER Z-Wave RSH-202-Z-01


Grenton ROLLER SHUTTER Z-Wave module allows for the control of blinds or roller shutter drives, enables the connection of 2 digital in-puts to the system, and supports the connec-tion of one digital 1-Wire temperature sensor.



1. Technical data

Device power supply	100-265V _{ac} 50/60Hz
Maximum power consumption	0,8W
Maximum load voltage	265Vac
Maximum power 1 phase motor (UL 508)	1,0Hp/265V _{ac} /channel
	16A / 265V _{ac} / summary,
Maximum current for resistive load AC1	16A / channel 1 (U),
	8A / channel 2 (D)
Insulation Low-High (230Vac) voltage	ЗkV
Maximum wire cross section	2,5mm ²
Z-wave frequency	EU: 868,4MHz
Weight	40g
Fixing	flush mounted
Dimensions (H/W/D)	22/46/37mm
Operating temperature range	0 to +45°C

Wiring diagram

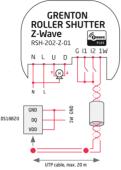

• The brand new device has Standalone Mode enabled. The inputs I1, I2 control the outputs U, D.

Low voltage G, I1, I2, 1W lines galvanically separated from high voltage N, L lines.

-	Rh Laura and Radiana and	
N	"Neutral" signal	
	"Line" signal	
U	UP output (COM = L)	
D	DOWN output (COM = L)	
G	GND for 1-Wire and digital inputs	
11	first digital input (potential-free)	
12	second digital input (potential-free)	
lW	1-Wire bus input	

The 'L' signal powers U and D outputs.

3. Module Inclusion

To add the device to the Z-Wave network:

- Connect the module according to the diagram above Set your Z-Wave controller into inclusion mode.
- З. 4.
 - The status LED turns OFF at the end of the Inclusion process.

If you are connecting this unit to a Z-Wave Controller that utilizes the 52 security protocol, you may be asked to enter the first 5 digits of Device Specific Key (DSK). You can find it on the label with QR code on the back of the unit. The device supports SmartStart function. SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller provid-ing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity. The device provides DSK representation on the product, so you can add it manually to the controller.

4. Module Exclusion

move the device from the Z-Wave network:

- Connect the module according to the diagram above 1.
- Set your Z-Wave controller into exclusion
- Generate quickly 1 6 pulses on 11 input. The status LED starts blinking with a period of 500ms. З.
- The status LED turns OFF at the end of the Exclusion process 4

Factory Reset

- ore factory configuration: To re
 - 1. Connect the module according to the diagram above
 - Generate quickly¹ 6 pulses on I2 input. The status LED turns ON 2.
 - Generate quickly¹ 6 pulses on I1 input. The status LED turns OFF. З.

Standalone Mode

ble/disable standalone mode

- 1. Connect the module according to the diagram above.
- Generate quickly¹ 6 pulses on I2 input. The status LED turns ON.
- Generate quickly $^{l}\,$ 4 pulses on 11 input. The status LED turns OFF. З.

Warnings and cautionary statements



ATTENTION I

Before proceeding with the assembly, read the installation schematics and full instructions available at www.grenton.com. Failure to follow the guidelines contained in the instructions and other requirements of due care valid as a result of the nature of the equipment (device) may be dangerous to life / health, damage the device or installation to which it is connected, dam-age other property or violate other applicable



regulations. The manufacturer of the device, Grenton Sp. zo. o. does not bear any responsibil-ity for the damage (property and non-property related) resulting from the assembly and / or use of the equipment not in accordance with the instructions and / or due diligence in han-ding the equipment (device). • Device power supply, permissible load or other characteristic parameters have to be in accordance with the device specification, de-scribed in particular in the "Technical data" sec-tion.

The product is not intended for children and animals.

animals. If you have technical questions or comments about the device operation, contact Grenton Technical Support. Answers to frequently asked questions can be found at: www.support.grenton.pl



Danger to life caused by electric current!
The components of the installation (individual devices) are designed to work in a home

8. CE marking

The manufacturer declares that the device is in full compliance with the require-ments of EU legislation that includes the dir-ectives of a new approach appropriate for this equipment. In particular, Grenton Sp. 2 o. o de-clares that the device fulfills the requirements on safety, specified by law, and that it conforms



electrical installation or directly in its vicinity. In-correct connection or use may cause a fire or electric shock. All work related to the installation of the device, in particular works involving interfer-ence in the electrical installation, may be per-formed only by a person with appropriate qual-ifications or licences. When installing the device, make sure that the power supply voltage is disconnected from he circuit in which the device is connected or near which the assembly takes place.

to the national regulations that implement the appropriate directives: The Radio Equipment Directive (RED - 2014/33/UE), the Low Volt-age Directive (LVD 2014/35/UE) and the Dir-ective on the limitation of the use of specific substances in electrical and electronic equip-ment (RoHS II - 2011/65/UE).



9. Warranty

Warranty available at: www.grenton.com/warranty

10. Manufacturer contact details

Grenton Sp. z o.o.

ul. Na Wierzchowinach 3

30-222 Kraków, Poland

www.grenton.com

¹ less then 200ms transition